




# Assembly Instruction For Replace Glass 20524,20525,20526,20529

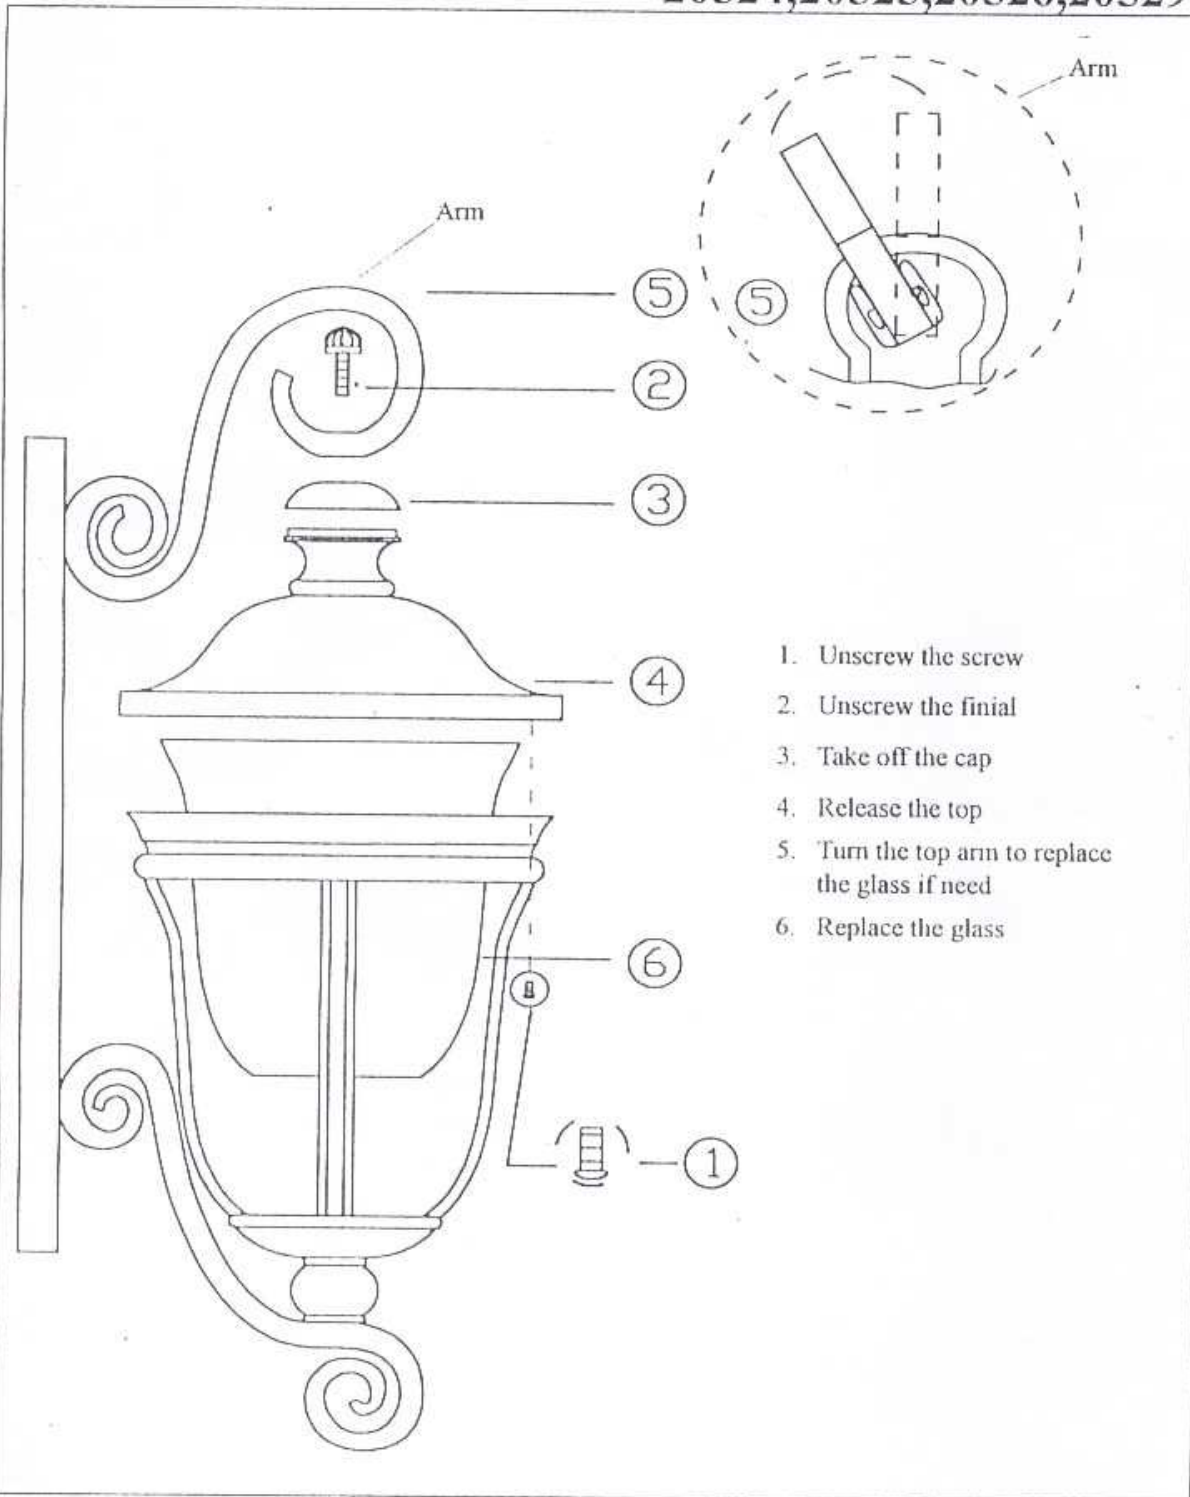

1. Unscrew the screw
2. Unscrew the finial
3. Take off the cap
4. Release the top
5. Turn the top arm to replace the glass if need
6. Replace the glass