





PRODUCT NAME: Milano 6 Light Chandelier  
ITEM NUMBER: 39555CLPN

Please consult your electrician for hanging fixture and wiring.


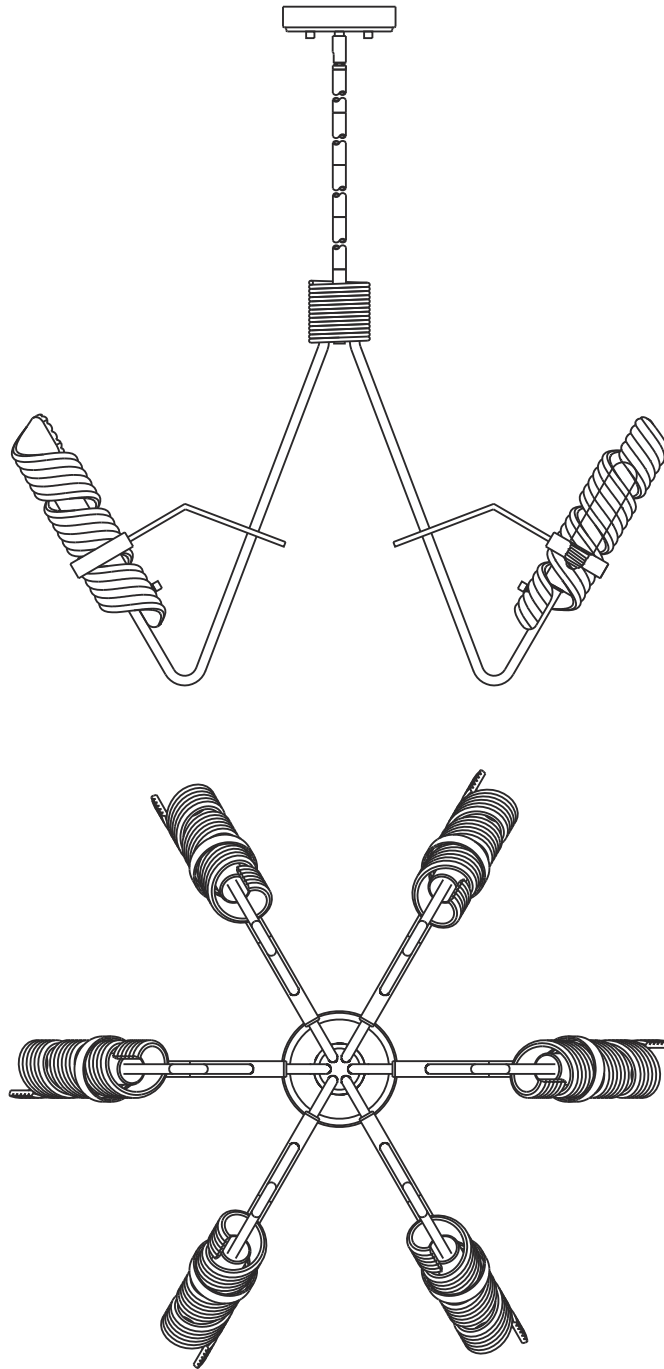


MB T10 6x60W


**IMPORTANT:** Turn off the power at the main fuse or circuit breaker box before starting installation.

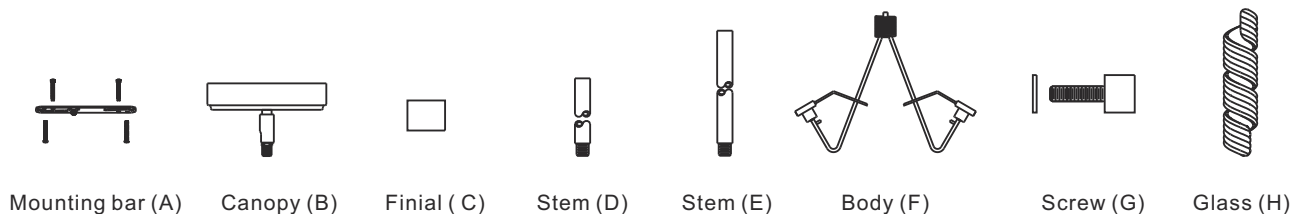


Locate all hardware & components before discarding packaging

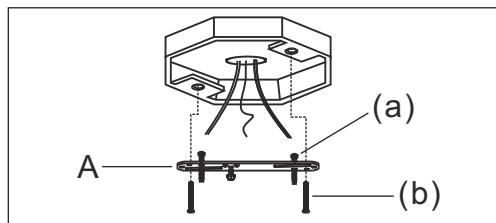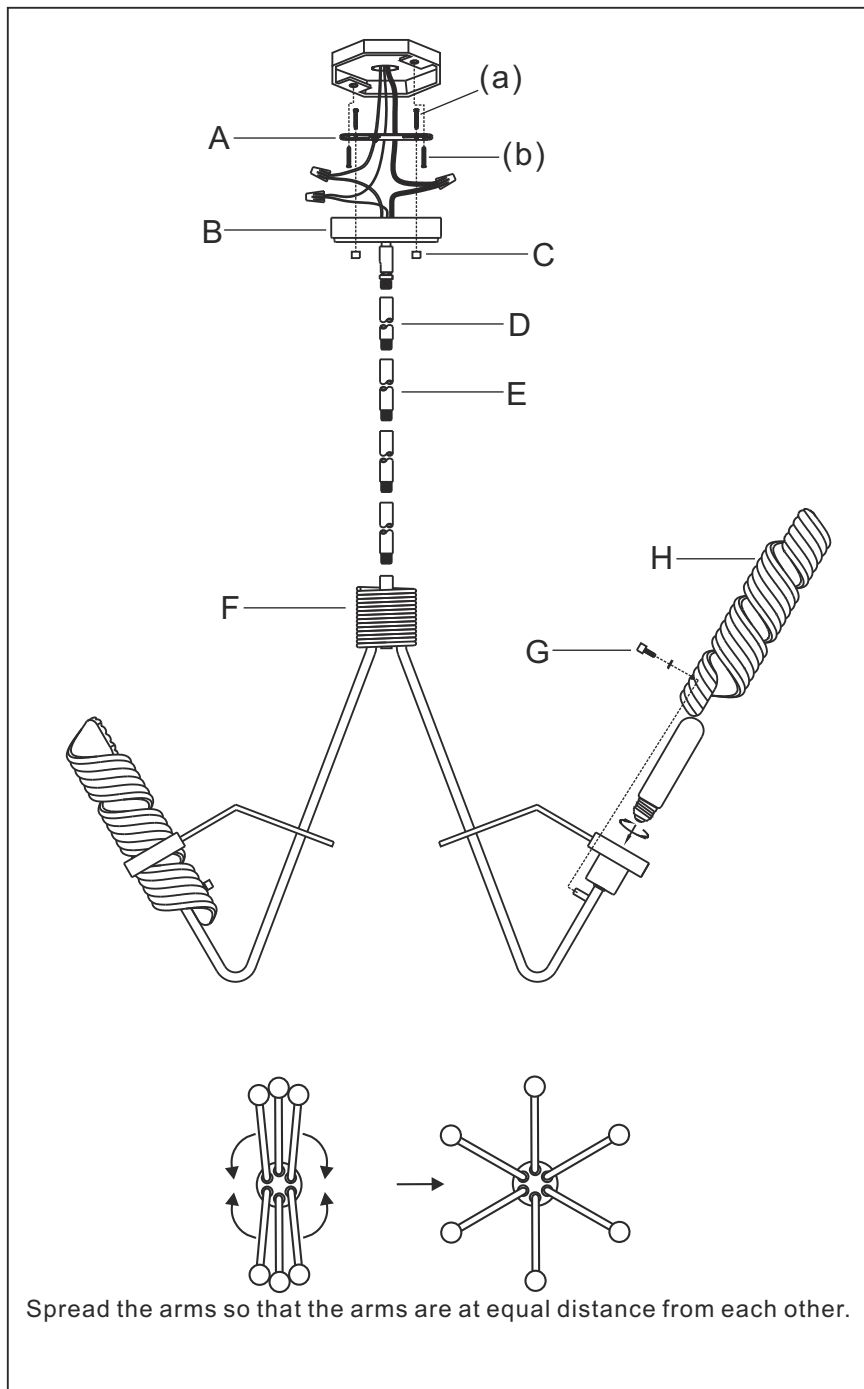


Step 1: Thread the mounting screws (a) into the matching holes in the mounting bar (A). Attach mounting bar (A) to junction box using screws (b).

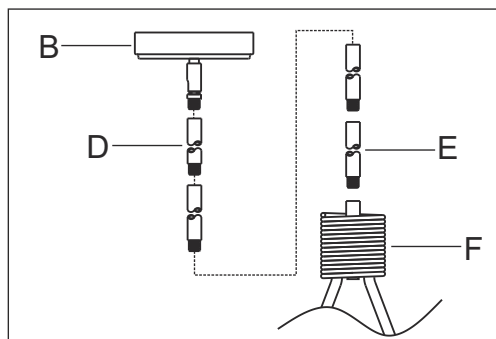

Step 2: Slip first stem section (E) along wire and thread into top of main fixture body (F). Repeat for assembly stem (D) and canopy (B).

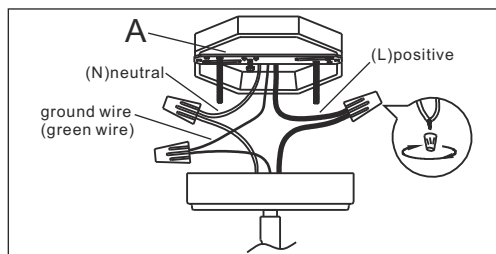

Step 3: Wire fixture to wires in junction box. Copper wire is for Ground.

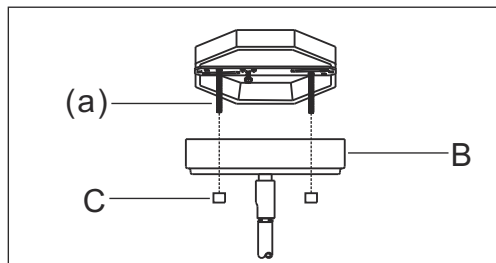

Step 4: Raise canopy (B) over screws (a) and secure with finials (C). Install light bulb. Place glass (H) over the socket, and then secure glass with screw (G).

#### Cleaning & Care:

Clean with soft cloth and a mild detergent.  
Do not use abrasive cleaner.